

Cable to Lug or Busbar

Mold Information:

- Molds listed are for stranded cable. For solid conductor, add suffix "S" after conductor number. i.e. 4S = 4 AWG solid conductor.
- Price Key is the **Bold Letter** in the Mold Part No.
- For mold Wear Plates, add suffix "WP" to the end of the Mold Part No. See page 315 for details.


Required Tools & Accessories:

MH1 - Handle for "B" Price Key Molds

Recommended Tools & Accessories:

CCBRSH1 - Cable Cleaning Brush

MCBRSH1 - Mold Cleaning Brush

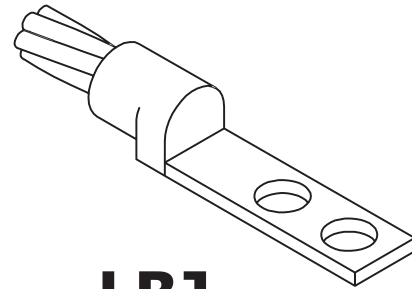

LBJ

(Butt End Splice of Horizontal Cable to Lug Bent J)

See page 305 for Lugs.

LBJ Connection Type

Cable Size	Lug Size	Mold Part No.	Weld Metal	
			UltraShot	NUWTUBE
#6	1/8 x 1	LBJ-6181B	US32	NUWTUBE32
#4	1/8 x 1	LBJ-4181B	US32	NUWTUBE32
#2 Sol	1/8 x 1	LBJ-2S181B	US32	NUWTUBE32
#2	1/8 x 1	LBJ-2181B	US45	NUWTUBE45
1/0	1/8 x 1	LBJ-1/0181B	US45	NUWTUBE45
2/0	1/8 x 1	LBJ-2/0181B	US45	NUWTUBE45
	3/16 x 1	LBJ-2/03161B	US65	NUWTUBE65
3/0	1/8 x 1	LBJ-3/0181B	US65	NUWTUBE65
	3/16 x 1	LBJ-3/03161B	US65	NUWTUBE65
4/0	1/8 x 1	LBJ-4/0181B	US65	NUWTUBE65
	3/16 x 1	LBJ-4/03161B	US65	NUWTUBE65